




Safewall Flame Retardant Moisture Barrier

INSTALLATION GUIDE

SHSAF48H2

Safewall panels are to be fastened directly to masonry walls. The first panel installed should be set true with a plumb line. Check plumb line throughout installation. Do not fasten edges of panel until trim moldings are in place. Allow 1/8" for expansion space at each seam (behind trim) Fastener holes in panel may be redrilled 1/8" larger for expansion, if needed.

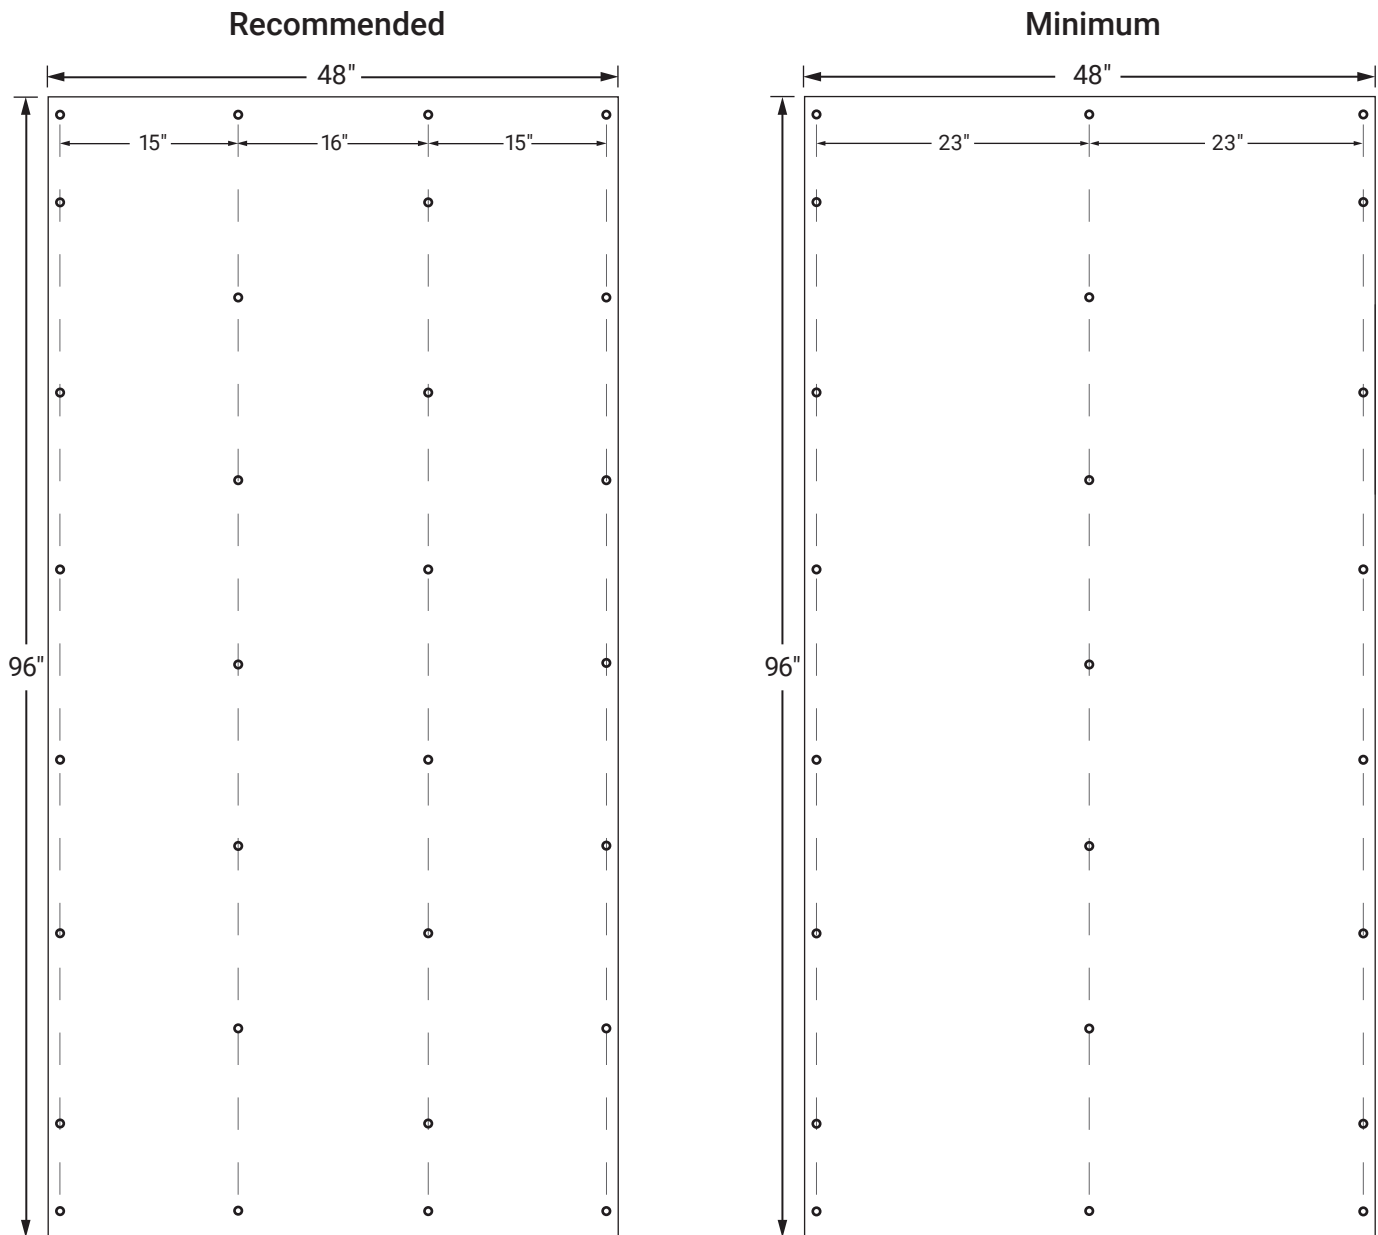

Safewall Panel Fastener Layout

1. Fasten panel at center and work outward.
2. Fasteners based on 16" O.C. (recommended), 24" O.C. (minimum).
3. Fasteners should be slightly staggered on opposite panel edges for best flat seams.
4. Panels may be pre-drilled for faster installation using a guide panel or template.
5. The use of adhesive in place of mechanical fasteners is not recommended.